1. 加入@botfather 帳號



2. 輸入/newbot 建立自己的機器人帳號



3. 輸入要建立的機器人名稱要符合命名規範,帳號後面要加_bot 有成功建立的話會顯示 Done ! Congratulations.....

14:14 🐧 🛃 🔽 Leg 46 내 59% 🛑 BotFather 🥏 bot ccc_bot 14:10 // Sorry, this username is already taken. Please try something different. 14.10 cccvvv_bot 14:11 V Sorry, this username is invalid. 14:11 xyz_bot 14:12 // Sorry, this username is already taken. Please try something different. 14.12 xjames_bot 14:13 🗸 Done! Congratulations on your new bot. You will find it at t.me/xjames_bot. You can now add a description, about section and profile picture for your bot, see /help for a list of commands. By the way, when you've finished creating your cool bot, ping our Bot Support if you want a better username for it. Just make sure the bot is fully operational before you do this. Use this token to access the HTTP API: 6429985519: 4429985519: 751CEXNK 5Pn6D uRACFCPxk Keep your token secure and store it safely, it can be used by anyone to control your bot. For a description of the Bot API, see this page: https://core.telegram.org <u>/bots/api</u> U, ⊟ Menu (::) Message



5. 先加入自己剛才建立的 bot 機器人帳號,會用此帳號會收 Router 端傳送的 telegram 訊息



6. 路由器物件設定 > SMS 自訂

https://api.telegram.org/bot"Your Bot Token"/sendMessage?chat_id=###txtDest###&text=###txtMsg###

藍框輸入步驟4的API連結

Quota 修改 65535

儲存設定

Dray Tek	Vigor3912 Series			ି ଜ <u>ସ</u>
Off ~ R6		Objects Setting >> SMS/Mail Service	Object	
Firewall User Management Objects Setting		Profile Index: 9		
IP Object		Profile Name	Custom 1	
P Group Pv6 Object		Service Provider	telg	
Service Type Object Service Type Group Keyword Object Keyword Group		nttps://apl.telegram.org/t ge?chat_id=###txtDest###&l	00Tp429985519: cext=###txtMsg###	CEXNK5PN6D_URACECPxk sendMessa
ine Extension Object SMS/Mail Service Object Iotification Object String Object		Please contact with your SM eg:bulksms.vsms.net:5567/ &password=###tvtPwd###	S provide to get the exact URL eapi/submission/send_sms/2/3	String 2.0?username=###txtUser### pessage=###tytMsg###
ountry Object bjects Backup/Restore		Server Response	Max: 31 characters	
M		Username	Max: 128 characters	
plications		Password	Max: 128 characters	
nux Applications 'N and Remote Access		Quota	65535	
rtificate Management		Sending Interval	3	(seconds)
System Maintenance Diagnostics		Note: 1. Only one message can be sent 2. If the "Sending Interval" was s	during the "Sending Interval"	time.

7. 加入@userinfobot 用來查詢自己的 telegram ID



8. 記下自己的 ID,等等可以在 Router 傳送測試訊息



9. 在 Router 端點選傳送測試訊息,並輸入所要傳到到的 ID

Objects Setting >> SMS/Mail	Service Object		
$\leftarrow \rightarrow C \hat{\mathbf{a}} \Delta \overline{\mathbf{x}} \hat{\mathbf{x}} \mathbf{$			९ 🕁
Dray Tek Vigor 3912 Series	60.248.142.79 顯示		<u>ش</u> 18 5
	Please enter the cellphone number that y	ou want receive the message:	
Firewall User Management Objects Setting IP Object	7048		
IP Group IPv6 Object		確定 取消	
IPv6 Group			6D_UBACECPxk/sendMessa
Service Type Object	ReicularTra=###cxcDesc###@cext	.=###uxunsg###	
Keyword Object			
Keyword Group			
SMS/Mail Service Object	Please contact with your SMS p	rovide to get the exact URL St	ring
Notification Object	eg:bulksms.vsms.net:5567/eap	i/submission/send_sms/2/2.0	?username=###txtUser###
Country Object	&password=###txtPwd###&n	nsisdn=###txtDest###&mes	sage=###txtMsg###
Objects Backup/Restore	Server Response	Max: 31 characters	
Bandwidth Management	Username	Max: 128 characters	
Applications	Password	Max: 128 characters	
VPN and Remote Access	Quota	65535]
Certificate Management	Sending Interval	3	(seconds)
System Maintenance	Note:		5
Diagnostics	 Only one message can be sent du 	ring the "Sending Interval" tim	ne.
	If the "Sending Interval" was set t	o 0, there will be no limitation	ı.
Central Management AP Switch	ОК	Clear Cancel Send	a Test Message

10. 可查看到自己的機器人帳號已經收到訊息



11. 新增要警示的類型設定檔

Dray Tek	Vigor3912 Series				ŵ	18
Off v R6	•	Objects Setting >> Notificatio	n Object			
User Management		Profile Index: 1				
Objects Setting IP Object IP Group		Profile Name	alert			
IPv6 Object		Category	9	Status		
IPv6 Group Service Type Object		WAN	Disconnected	Reconnected		
Service Type Group Keyword Object Keyword Group		VPN Tunnel	Disconnected Downtime Limit 60~3600 seconds	□ Reconnected		
SMS/Mail Service Object		Temperature Alert	USB Out of Range			
Notification Object		WAN Budget	Limit Reached			
Country Object Objects Backup/Restore		High Availability	 Failover Occurred Config Sync Fail Router Unstable 			
Bandwidth Management Applications Linux Applications /PN and Remote Access Certificate Management USB Application System Maintenance Diagnostics		Security	✓ Web Log-in ⊂ Telnet Log-in SSH Log-in ⊤R069 Log-in FTP User Log-in Config Changed(From	WebUI and CLI)		
Central Management AP Switch External Devices	×	Note: 1.When High Availability is	OK Clear (Cancel Provider profile should se	et to 0.	

12. 訊息警示選擇 telegram 類型和所要接收的 ID



Applications >> SMS/Mail Alert Service

SI	MS Alert	Mail	Alert				Se	t to Facto	ry Defau
Index Enable		nable <u>SMS Provider</u> Recipie		ent Number <u>Notify Profile</u>	Schedule(1-15)				
1		9 - Custom 1 🗸	7048		1 - alert 🗸	None	~	None	~
2		1-777 🗸 🗸			1 - aiert 🗸	None	~	None	\sim
3		1 - ??? 🗸 🗸			1 - alert 🗸	None	~	None	\sim
4		1 - ??? 🗸 🗸			1 - alert 🗸	None	~	None	\sim
5		1 - ??? 🗸 🗸			1 - alert 🗸	None	~	None	~
6		1 - ??? 🗸 🗸			1 - alert 🗸	None	\sim	None	\sim
7		1-??? 🗸			1 - alert 🗸	None	\sim	None	~
8		1 - ??? 🗸 🗸			1 - alert 🗸	None	~	None	\sim
9		1-??? 🗸			1 - alert 🗸	None	~	None	~
10		1 - ??? 🗸 🗸			1 - alert 🗸	None	~	None	~

نگ <mark>(1</mark>8 ا

Note

All the SMS Alert profiles share the same "Sending Interval" setting if they use the same SMS Provider.

OK Cancel

13. 當觸發相關警示類型, Router 就會發訊息警示到 telegram 端

