UBS-5324z 增加次管理員

[目的]

增加第2個管理員來登入UBS-5324z(因為當線上有使用 admin 帳號登入UBS-5324z之後,其他人就無法在使用 admin 帳號登入UBS-5324z)。

[準備工作]

1.一台桌上型電腦(或筆記型電腦)。

2.一條網路線。

3.電腦有線網路卡手動自定 IP->192.168.2.100

4.將網路線一端插入有線網路卡,一端插到 UBS-5324z 第一孔。

[步驟1] 電腦瀏覽器網址輸入 192.168.2.1, 然後依照下面畫面操作。





[步驟 2] 新增第2個管理員,請依照下面畫面操作。

A (1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	ne.html?ver=156385697451; Q + C	-53247	2 日 回 2 合 字 認
檔案(F) 編輯(E) 檢視(V) 我的最愛	(A) 工具(T) 說明(H)		
	Management)) User Account		Save Logout Reboot Debug
Multicast Security	User Account		
 Management Access Management VLAN Management Service Protected Port Storm Control 	Showing All v entries Username Privilege admin Admin	Showing 1 to 1 of 1 entries	۵,
DoS Qos General Property	3, Add Edit Delete		First Previous 1 Next Last
Queue Scheduling CoS Mapping DSCP Mapping IP Precedence Mapping Bate Limit			
Rate Limit Ingress / Egress Port Egress Queue Diagnostics			
Logging Mirroring Ping Copper Test			
Management 2. User Account Firmware Configuration			
 SNMP 			

[步驟3] 設定第2個管理員的帳號與密碼,請依照下面畫面操作。

C C C C C C C C C C C C C C C C C C C	me.html/wer=156385697451: 0 - C @ IIBC.5224-	
(信義(F) 編輯(E) 復代(V) 衣的地表	Management)) User Account	Save Logout Reboot Debug
Multicast Security Management Access Management VLAN Management Service Protected Port Storm Control DoS Gos Gos	Username Ublink Passwort	
 SNMP 		×

[步驟 4] 設定完成畫面如下。

	-		
C 🕞 🧭 http://192.168.2.1/hor	me.html?ver=156385697451: 🔎 🗝 🖒	<i>(</i> [€] UBS-5324z ×	· · · · · · · · · · · · · · · · · · ·
檔案(F) 編輯(E) 檢視(V) 我的最愛	L(A) 工具(T) 說明(H)		
 Blacketty Blacketty Blacketty Management Access Management Access Management VLAN Management VLAN Management Protected Port Storn Control DoS General Protected Port Storn Control DoS GoS General Property Queue Scheduling CoS Mapping DSCP Mapping Rate Limit Ingress / Egress Port Egress Queue 	me.html?ver=156385697451: ♀ - ♥ (A) IR(T) RKR(H) Management → User Account User Account Showing All ♥ entries Username Privilege admin Admin Add Edit	Delete	G ☆ 8 Save Logout Reboot Debug Q First Previous 1 Next Last
Congrigation Cogging Mirroring Ping Copper Test Management User Account Firmware Configuration SIMIP			

[步驟 5] 將設定存檔,請依照下面畫面操作。

C A http://192.168.2.1/	/home.html2ver=156385697451: 0	- C C LIPS 5224-	~	
福宾(F) 编輯(E) 檢視(V) 我的)最愛(A) 工具(T) 説明(H)	085-53242	*	
Constant of the second se	Abome.html?ver=156385697451、A 記愛(A) 工具(T) 説明(H) Nanagement 》 User . User Account Showing AII ④ entries ● Userame Priviles ● Userame Priviles ● ubink Admin Admin Admin Add Edit	- C @ UBS-5324z	Showing 1 to 2 of 2 entries	Cr ☆ S L Save Logout Reboot Debug Cr → S Cr →
Ping Copper Test Management User Account	,			

以上就完成了 UBS-5324z 增加次管理員設定了。