

# Vigor1000B

## **Multi-WAN Security Router**



## QUICK START GUIDE

V1.4

## Vigor1000B Multi-WAN Security Router Quick Start Guide

Version:1.4 Firmware Version: V4.3.2.4

(For future update, please visit DrayTek web site) Date: August 14, 2023

## Intellectual Property Rights (IPR) Information

Copyrights	© All rights reserved. This publication contains information that is protected by copyright. No part may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without written permission from the copyright holders.
Trademarks	<ul> <li>The following trademarks are used in this document:</li> <li>Microsoft is a registered trademark of Microsoft Corp.</li> <li>Windows 8, 10, 11 and Explorer are trademarks of Microsoft Corp.</li> <li>Apple and Mac OS are registered trademarks of Apple Inc.</li> <li>Other products may be trademarks or registered trademarks of their respective manufacturers.</li> </ul>

## Safety Instructions and Approval

Safety Instructions	<ul> <li>Read the installation guide thoroughly before you set up the router.</li> <li>The router is a complicated electronic unit that may be repaired only be authorized and qualified personnel. Do not try to open or repair the router yourself.</li> <li>Do not place the router in a damp or humid place, e.g. a bathroom.</li> <li>Do not stack the routers.</li> <li>The router should be used in a sheltered area, within a temperature range of +5 to +40 Celsius.</li> <li>Do not expose the router to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.</li> <li>Do not deploy the cable for LAN connection outdoor to prevent electronic shock hazards.</li> <li>Do not power off the device when saving configurations or firmware upgrades. It may damage the data in a flash. Please disconnect the Internet connection on the device before powering it off when a TR-069/ACS server manages the device.</li> <li>Keep the package out of reach of children.</li> <li>When you want to dispose of the router, please follow local regulations on conservation of the environment.</li> </ul>
Warranty	We warrant to the original end user (purchaser) that the router will be free from any defects in workmanship or materials for a period of two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary tore-store the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value, and will be offered solely at our discretion. This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions. The warranty does not cover the bundled or licensed software of other vendors. Defects which do not significantly affect the usability of the product will not be covered by the warranty. We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.



# (6

## EU Declaration of Conformity

We DrayTek Corp., office at No.26, Fushing Rd., Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan, declare under our sole responsibility that the product

- Product name: <u>Multi-WAN Security Appliance</u>
- Model number: <u>Vigor1000B</u>
- Manufacturer: <u>DrayTek Corp.</u>
- Address: <u>No.26, Fushing Rd., Hukou, Hsinchu Industrial Park,</u> Hsinchu 303, Taiwan

is in conformity with the relevant Union harmonisation legislation:

EMC Directive 2014/30/EU, Low Voltage Directive 2014/35/EU and RoHS 2011/65/EU with reference to the following standards

Standard	Version / Issue date
EN 55032	2015+AC:2016 class A
EN 61000-3-2	2014 Class A
EN 61000-3-3	2013
EN 55035	2017/A11:2020
EN 62368-1	2014/AC:2015
EN IEC 63000:2018	2018

Caluin Ma

<u>Hsinchu</u>

22nd February, 2021

(place)

(date)

Calvin Ma / President


(Legal Signature)

### Table of Contents

1. Package Content 1	1
2. Panel Explanation	2
2.1 LED	2
2.2 Connectors	3
3. Hardware Installation	4
3.1 Connecting Device	4
3.2 Rack-Mounted Installation	5
4. Software Configuration	6
4.1 Quick Start Wizard for Network Connection	6
5. Customer Service	3

## 1. Package Content

Take a look at the package content. If there is anything missed or damaged, please contact DrayTek or dealer immediately.

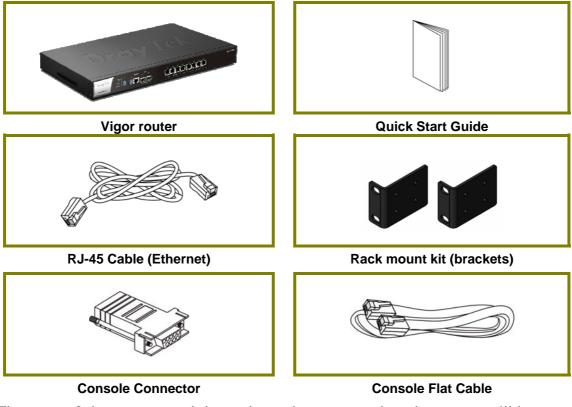

The type of the power cord depends on the country that the router will be installed.



USA/Taiwan-type Power Cord



EU-type Power Cord

## 2. Panel Explanation

### 2.1 LED

DRGYTEK Security Router

LED		Status	Explanation		
PWR		On	The router is powered on.		
PWK		Off	The router is powered off.		
ACT		Blinking	The system is active.		
		Off	The system is hanged.		
USB		On	The USB device is installed and ready.		
030		Off	No USB device is installed.		
		On	The fiber connection is established.		
SFP+		Blinking	The data is transmitting.		
2664		Off	No fiber connection is established or the system is hanged.		
		On	The Ethernet link is established on corresponding port.		
	Left	Off	No Ethernet link is established.		
		Blinking	The data is transmitting.		
P3 ~P10	Dialet	On	The Ethernet link is established on corresponding port with 1G Mbps or above.		
	Right	Off	The Ethernet link is established on corresponding port with less than 1G Mbps.		

#### **2.2 Connectors**

CONSOLE SFP P1 P1 Wan /I	* P2 P3 P4 P5 P6 P7 P8 P9 P10 annual annual annua
Interface	Description
USB1 / USB2	Connecter for the USB device.
Console	Provided for technician use.
SFP+ (P1~P2)	Connecter for SFP module with the rate of 10G/1G bps.
P3~P6	Connectors for remote network devices or local network devices (WAN/LAN) with the rate of 1G/100M/10M bps.
P7~P10	Connecter for local network devices (LAN) with the rate of 1G/100M/10M bps.
0	The Factory Reset button is used to restore the default settings. Turn on the router (ACT LED is blinking). Press the hole and keep for more than 5 seconds. When you see the ACT LED begins to blink rapidly than usual, release the button. Then the router will restart with the factory default configuration.
	Connecter for a power cord. ON/OFF - Power switch.

The ports "P3 to P6" are switchable. It can be used for LAN connection or WAN connection according to the settings configured in WUI.

## 3. Hardware Installation


This section will guide you to install the router through hardware connection and configure the router's settings through web browser.

#### **3.1 Connecting Device**

Before starting to configure the router, you have to connect your devices correctly.

- 1. Connect a modem to any WAN port of Vigor1000B with Ethernet cable (RJ-45) to access Internet.
- 2. Connect the other end of the cable (RJ-45) to the Ethernet port on your computer (that device also can connect to other computers to form a small area network). The LAN LED for that port on the front panel will light up.
- 3. Connect a server/router (depends on your requirement) to any WAN port of Vigor 1000B with Ethernet cable (RJ-45). The WAN LED will light up.
- 4. Connect the power cord toVigor1000B's power port on the rear panel, and the other side into a wall outlet.
- 5. Power on the device by pressing down the power switch on the rear panel. The PWR LED should be ON.
- 6. The system starts to initiate. After completing the system test, the ACT LED will light up and start blinking.

Below shows an outline of the hardware installation for your reference.

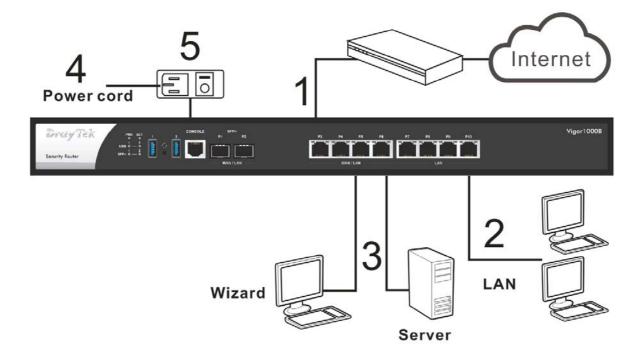


#### 3.2 Rack-Mounted Installation

The Vigor1000B can be mounted on the shelf by using standard brackets shown below.



1. Fasten the rack mount kit on both sides of the Vigor router using specific screws.

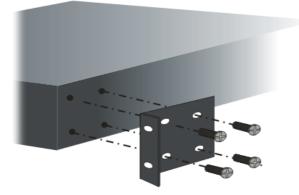

2. Then, install the Vigor router (with rack mount kit) on the 19-inch chassis by using other four screws.



## 4. Software Configuration

To access Internet, please finish basic configuration after completing the hardware installation.

#### 4.1 Quick Start Wizard for Network Connection


Make sure your PC connects to the router correctly.



You may either simply set up your computer to get IP dynamically from the router or set up the IP address of the computer to be the same subnet as **the default IP address of Vigor router 192.168.1.1**. For the detailed information, please refer to -Trouble Shooting of the user's guide.

Open a web browser on your PC and type http://192.168.1.1. A pop-up window will open to ask for username and password. Please type "admin/admin" as the Username/Password and click Login.

<b>Dray</b> Tek	Username admin Password
Vigor1000B	Login
	Login

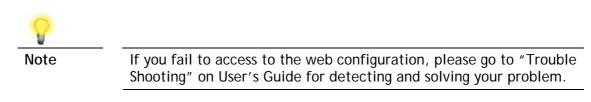

<b>Dray</b> Tek	Vigor 1000B Series						â 🗟 🕸 🖾
× 186	Dashboard						
hboard ards ine Status inch Menu	Dray Tek Security Router	PWH ACT 1 USB 1 - 2 SFP+ 2		AN1 LAN	ΓT		E P7 P8 P9 P10 UN
Setup							■10/100M ■1G ■2.5G ■10G
spot Web Portai ting	System Informatio	n					Quick Access
wall	Model Name	Vigor1000B		System Up Time	06:16:46		System Status
Management cts Setting	Router Name	DrayTek		Current Time	Sat Jan 01 200	0 06:18:08	Dynamic DNS
width Management	FW /Loader Version	4.3.2.4/v27		Build Date/Time	May 25 2023 1	1:23:39	TR-069
cations and Remote Access	LAN MAC Address	14-49-BC-14-C4-4	8				User Management
Ficate Management Application		The second second second second					IM/P2P Block
m Maintenance nostics	System Resource	3					Schedule
iostics	CPU Usage:					1%	SynLog / Mail Alert
al Management	Co-Proc CPU:					1%	LDAP
	corrice cro.					1.70	RADIUS
al Devices	Memory Usage:	6				64%	Firewall Object Setting
or Services or Registration	Session (cur./max.)					N/A	Data Flow Monitor
e Status	IPv4 LAN Informat	ion					Certificate Status
Rights Reserved.		IP Address	DHCP		IP Address	DHCP	Expired (0)
	LAN1	192.168.1.200/24					Expire within 30 days (0)
		o biwice of the bid of the	1980				Unsecure (0)
	IPv4 Internet Acce	55					and a second
	Line /	Mode	IP Address	MAC Addres	•	Up Time	• OK (0)
Admin mode	WAN1 SFP+	DHCP Client	Disconnected	14-49-8C-1	4-04-49	00:00:00	Not Valid Yet (0)
	WAN3 Ethere	et / DHCP Client	Disconnected	14-49-8C-1		00:00:00	View More

Now, the Main Screen will pop up. Click Wizards>>Quick Start Wizard.

If your router can be under an environment with high speed NAT, the configuration provide here can help you to deploy and use the router quickly. The first screen of **Quick Start Wizard** is entering login password. After typing the password, please click **Next**.

#### Quick Start Wizard

Old Password	••••
New Password	•••••
Confirm Password	
Password Strength:	Weak Medium Strong
2. Including non-alphanur	er-case letter and one lower-case letter. meric characters is a plus. the password unchanged, leave the password blank and press "Next"

On the next page as shown below, please select the WAN interface that you use. Then click **Next** for next step.

Quick Start Wizard

Select WAN Interface Select WAN Interface: Display Name:	WAN3 V
Physical Mode:	Ethernet
Physical Type:	Auto negotiation 🗸
	< Back Next > Finish Cancel

You have to select the appropriate Internet access type (PPPoE, Static IP or DHCP) according to the information from your ISP.

Here we take PPPoE and DHCP modes for WAN connection as examples.

#### For PPPoE Connection

1. Choose **WAN3** as WAN Interface and click the **Next** button; you will get the following page.

Quick Start Wizard					
Connect to Internet					
WAN 3					
Select one of the follow	ing Internet Acces	s types provide	ed by your ISP.		
	PPPoE				
	O Static IP				
		< Back	Next >	Finish	Cancel

2. Select **PPPoE** and click **Next** to get the following page.

WAN 3	
Enter the user name and passv	vord provided by your ISP.
Service Name (optional)	
Username	84005657@hinet.net
Password	•••••
Confirm Password	••••••

3. Enter the Username/Password provided by your ISP. Then click **Next** for viewing the summary of such connection.

start Wizard		
se confirm your settings:		
WAN Interface:	WAN3	
Physical Mode:	Ethernet	
Internet Access:	PPPoE	
settings and restart the V	igor router.	

4. Click Finish. A page of Quick Start Wizard Setup OK!!! will appear. Then, the system status of this protocol will be shown.

Quick Start Wizard Setup OK!

5. Now, you can enjoy surfing on the Internet.

#### For DHCP Connection

1. Choose **WAN3** as WAN Interface and click the **Next** button; you will get the following page.

k Start Wizard					
nect to Internet					
WAN 3					
Select one of the	following Internet Acce	ess types provided by	y your ISP.		
	O PPPoE				
	O Static IP				
	DHCP				
		< Back	Next >	Finish	Ca

2. Select **DHCP** and click **Next** to get the following page.

Quick Start Wizard

DHCP Client Mode	
WAN 3	
If your ISP requi enter it in.	ires you to enter a specific host name or specific MAC address, please
Host Name	Vigor (optional)
MAC	14 - 49 - BC - 14 - C4 - 4B (optional)
<u> </u>	
	< Back Next > Finish Cancel

3. Enter the hostname and / or MAC address provided by your ISP. Then click **Next** for viewing summary of such connection.

e confirm your settings:	
WAN Interface:	WAN3
Physical Mode:	Ethernet
Internet Access:	DHCP
settings and restart the Vig	

4. Click Finish. A page of Quick Start Wizard Setup OK!!! will appear. Then, the system status of this protocol will be shown.

Quick Start Wizard Setup OK!

5. Now, you can enjoy surfing on the Internet.

## **5. Customer Service**

If the router cannot work correctly after trying many efforts, please contact your dealer for further help right away. For any questions, please feel free to send e-mail to support@draytek.com.

#### Be a Registered Owner

Web registration is preferred. You can register your Vigor router via https://myvigor.draytek.com.

#### Firmware & Tools Updates

Due to the continuous evolution of DrayTek technology, all routers will be regularly upgraded. Please consult the DrayTek web site for more information on newest firmware, tools and documents.

https://www.draytek.com

GPL Notice	This DrayTek product uses software partially or completely licensed under the terms of the GNU GENERAL PUBLIC LICENSE. The author of the software does not provide any warranty. A Limited Warranty is offered on DrayTek products. This Limited Warranty does not cover any software applications or programs.
	To download source codes please visit:
	http://gplsource.draytek.com
	GNU GENERAL PUBLIC LICENSE:
	https://gnu.org/licenses/gpl-2.0
	Version 2, June 1991
	For any question, please feel free to contact DrayTek technical support at support@draytek.com for further information.